




Schurter

CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S

| | |
|-------------------------|---|
| Inombolo yendawo: | CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S |
| Umkhqizi / Umshicileli: | Schurter |
| Ingcaciso yeMveliso | SWITCH PUSHBUTTON SPST 100MA 42V |
| Maxwebhu: | PDF CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S.pdf |
| RoHS Imeko |  Ukukhokela mahala / RoHS Ukuthobela |
| Umkhumbi | ehong Kong |
| Indlela yokuthunyelwa | DHL/Fedex/TNT/UPS/EMS |

ISICELO

SESIKATSHULWA

Umfanekiso ungunonakaliswa. Bona iinkcukacha zeenkukacha zeemveliso.

Iinkcukacha zeCPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S

| | |
|---------------------------------------|---|
| INOMBOLO YENDAWO | CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S |
| UMENZI | Schurter |
| INKCAZO | SWITCH PUSHBUTTON SPST 100MA 42V |
| ISIMO SOBUME BENKOKELI / ISIMO SEROHS | Ukukhokela mahala / RoHS Ukuthobela |
| ISHITI YEDATHA | PDF CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S.pdf |
| I-VOLTAGE RATING - DC | 60V |
| I-VOLTAGE RATING - AC | 42V |
| UHLOBO | Capacitive, Illuminated |
| STYLE TERMINATION | Wire Leads |
| SHINTSHA UMSEBENZI | Off-On |
| UCHUNGECHUNGE | CPS |
| I-PANEL CUTOOUT UBUKHULU | Circular - 19.10mm Dia |
| PACKAGING | Bulk |
| UKUSHISA OKUSEBENZAYO | -40°C ~ 60°C |
| UHLOBO LOKUPHAKAMISA | Panel Mount, Front |
| INQANABA LOKUSONDEZA UBUNINZI (MSL) | 1 (Unlimited) |
| LIFE MECHANICAL | - |
| ISIMO SOBUME BENKOKELI / ISIMO SEROHS | Lead free / RoHS Compliant |
| UKUKHUSELA I-INGRESS | IP67 - Dust Tight, Waterproof |
| UKUKHANYISA IVOTTAGE (IGAMA LOMNTU) | 5 ~ 28 VDC |
| UHLOBO LOKUKHANYISA, UMBALA | LED, White/Cyan |
| IIMBONAKALO | Ceramic Actuator, Multiply Symbol |
| UBOMI BOMBANE | - |
| INKCAZO ECACILEYO | Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front |
| ISILINGANISO SAMANJE | 100mA (AC/DC) |
| UMBALA - I-ACTUATOR / CAP | Clear (White Filter/Diffuser) |
| ISIPHALUKA | SPST |
| UHLOBO LWE-ACTUATOR | Round, Button, Flush |

Amanqaku afanayo

| | | |
|--|--|--|
| Schurter CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S | Umhambisi we-CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S | Umboneleli we-CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S |
| Ixabiso le-CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S | Imifanekiso ye-CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S | Umfanekiso we-CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S |
| Idatha ye-CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S yePD | I-CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S Khuphela iDdatasheet | Idatha ye-CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S |
| Ivenkile ye-CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S | Thenga iCPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S | Thenga iSchurter CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S |
| Schurter CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S | Umboneleli we-Schurter | Umhambisi we-Schurter |
| Schurter CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S | Schurter Inc. CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1040-S | |

Iimveliso ezihambelanayo

| | |
|--|---|
|  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1041-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1046-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1034-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1039-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1045-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1037-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1035-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1044-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1036-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1038-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1043-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCCWTNF-AI0WCVAR-W1042-S</p> <p>Abavelisi: Schurter Inkcazo: SWITCH PUSHBUTTON SPST 100MA 42V Ikhona evenkileni: Out stock</p> <p>RFQ</p> |